

Changing the Master Code

-
1. Enter the Master code + 8 + 02 + New Code + the New Code again.
 2. Keypad will beep 1 time for confirmation letting you know the code was successfully changed.
-
-