

Function Key Programming

1. Enter Program mode by entering your installers code + 8 + 0 + 0, or if you do not know the installers code you can power down & up then press [*] + [#] simultaneously within 50 seconds of power up.
- 2.

Start Function Key Programming mode by pressing *57 while in Data Programming mode. The following prompts are displayed:

PROMPT	VALID ENTRIES	EXPLANATION
<div>Press Key to Pgm</div> <div>0 = Quit 0</div>	Function Key Press the desired function key, A-D. [*] to continue	Press the desired function key (A-D) you want to program. NOTE: A key programmed as a function key is no longer available to be used as an end-user macro key or panic key. <div> <div>A →</div> <div>1 OFF</div> <div>2 AWAY</div> <div>3 STAY</div> </div> <div> <div>B →</div> <div>4 MAX</div> <div>5 TEST</div> <div>6 BYPASS</div> </div> <div> <div>C →</div> <div>7 INSTANT</div> <div>8 CODE</div> <div>9 CHECK</div> </div> <div> <div>D →</div> <div>* READY</div> <div>0</div> <div>#</div> </div>
<div>Partition</div> <div>1</div>	Partition Number 1 = partition 1 2 = partition 2 3 = common partition [*] to continue	Enter the partition in which the function key is active.
<div>Key "A" Func</div> <div>Zone 95 00</div>	Define Key Function 00-12 = see list to right [*] to continue Returns to key number prompt with the next function key letter displayed. † System defaults to these function key settings. †† Macros 11-12 apply to VISTA-20P only.	Enter the desired function for this key, 00 to 12, from the options listed. (00 selected for example display shown at left) 00 [†] = For the Function key selected, the function will be as follows: If A selected = Zone 95 (emergency key, same as [1] [*] pair) If B selected = Zone 99 (emergency key, same as [*] [#] pair) If C selected = Zone 96 (emergency key, same as [3] [#] pair) If D selected = Single-button paging 01 = Single-button paging (sends a 999-9999 message to pager) 02 = Display time 03 = Arm AWAY (reports as User 00 if closing reports are enabled) 04 = Arm STAY (reports as User 00 if closing reports are enabled) 05 = Arm NIGHT-STAY (reports as User 00 if closing reports are enabled) 06 = Step Arming (arms STAY, then NIGHT-STAY, then AWAY) 07 = Device Activation (for device programmed as system operation type 66—function key in *80 Menu Mode) 08 = Communication Test (sends Contact ID code 601) 09 = Macro Key 1 (define macro by user code + [#] [6] [6] command) 10 = Macro Key 2 (define macro by user code + [#] [6] [6] command) 11 ^{††} = Macro Key 3 (define macro by user code + [#] [6] [6] command) 12 ^{††} = Macro Key 4 (define macro by user code + [#] [6] [6] command)

3. After programming the A-D keys has been completed, when keypad shows 'Press Key to Prgm' Enter 0, then press [*] to exit this menu mode.
4. Press [*] 99 to exit program mode.

NOTE: Press & hold the desired function key for 2 seconds to perform the programmed function.