

Partitioning

NOTES:

- **Partition 3 is the common partition**
 - **See Zone Programming Steps to assign zones to partitions 1-3**
-
1. Enter program mode: “Installer Code” + 8+0+0 or power down & up then press [*] + [#] keys simultaneously within 50 seconds of power up.
 2. Press [*] 190 & for the first entry enter 1 for partition 1, 2 for partition 2 or 3 for the common partition. For the second entry enter 0 for no suppression, 1 to suppress arm/disarm & E/E beeps, 2 to suppress chime beeps only, or 3 to suppress arm/disarm, E/E beeps & chime beeps
 3. After the second entry has been completed the screen will display ‘Keypad Addr. 18 191’; for the first entry enter 1 for partition 1, 2 for partition 2 or 3 for the common partition. For the second entry enter 0 for no suppression, 1 to suppress arm/disarm & E/E beeps, 2 to suppress chime beeps only, or 3 to suppress arm/disarm, E/E beeps & chime beeps, Repeat this step for keypad addresses 19-23.
 4. Press [*] 99 to exit program mode
 5. Wire all keypads to their corresponding terminals on the control (see wiring keypad steps)
 6. Upon powering up the keypads press & hold [1] + [3] simultaneously within 30 seconds.
 7. Enter the correct keypad address for each (17-23) then press [*] to exit & save.