

1. Enter program mode by powering down then back up and pressing the *+# simultaneously within 50 seconds of power up, or enter the Installer code (4112) + 8 + 0 + 0.

2. Screen displays, “INSTALLER CODE 20”

3. Press *80

4. Screen displays: “Output Funct #” 01
Press 01*

4. Screen displays: “01 A E P Trig
?00 0 0 - ZL =00”
This is a Summery Where; A= Device Action; E = Triggering event; P = Partition; Trig = Trigger Type (? = device has yet to be mapped/programmed)
Press *

5. Screen Displays: “ 01 Activated By: Delete 0”
Choices are as follows; 1 = zone list; 2 = zone type; 3 = zone number; 0 = delete

6.1 If you choose 1 screen will display “01 Zn List” Choose a Zone List 1-8
(See instructions for zone list programming, we will not cover this in this document)

7.2 If you choose 2 screen will display “01 Enter Zone Type”, where you will have the following choice to enter:

CHOICE FOR ZONE TYPES		
00 = Not Used	06 = 24-Hr Silent	14 = Carbon Monoxide
01 = Entry/exit #1	07 = 24-Hr Audible	16 = Fire w/Verification
02 = Entry/exit #2	08 = 24-Hr Aux	23 = No Alarm Respon
03 = Perimeter	09 = Fire 24	24 = Silent Burglary
04 = Interior Follower	10 = Interior w/Delay	25 = 24hr Non-Alarm
05 = Trouble Day/Alarm Night	12 = Monitor Zone	77 = Keyswitch Zone
CHOICES FOR SYSTEM OPERATION		
20 = Arming–STAY	39 = Any Fire Alarm	60 = AAV
21 = Arming–AWAY	40 = Bypassing	66 = Function Key †
22 = Disarming (Code + OFF)	41 = AC Power Failure	67 = Bell Fail
31 = End of Exit Time)	42 = Sys Battery Low	68 = Telco Line Cut
32 = Start of Entry Time	43 = Comm Failure	78 = Keyswitch RED LED
33 = Any Burglary Alarm	52 = Kissoff	79 = Keyswitch Green LED
36 = **At Bell Timeout †	54 = Fire Zone Reset	
38 = Chime	58 = Duress	
** Use 3 (any) for Partition No. (P) entry		
† Or at Disarming, whichever occurs first.		
† Use *57 Menu Mode to assign the function key (function “07”)		

After you have made a choice from above

Press * and enter one of the following:
0 = any partition

	1 = partition 1 2 = partition 2 3 = common
8.3	If you choose 3 screen will display “01 Enter Zone No.” and will choose a active zone # and hit * Screen will now display “Enter Event” Choices are as follows: 0 = Restore; 1 = Alarm/Fault/Trouble
9.	Press *, Screen displays: “Output action”
10.	Screen displays: Output action: Choose from the following 0 = off 1 = Close for 2 seconds 2 = Close and Stay Closed 3 = Continuous Pulse on & off 4 = Toggle state of relay 5 = Duration 1 (see data field *177) 6 = Duration 2 (see data field *177) Make a choice and press *
11.	The display now shows “Enter Output No.” Enter 17 for trigger 1 or 18 for trigger 2 Press *
12.	Screen now displays summery: 01 A E P Trig ?00 0 0 - ZL =00 This is a Summery Where; A= Device Action; E = Triggering event; P = Partion; Trig = Trigger Type
13.	By pressing *, Screen will display “Output Funct #” either continue with next output and repeat steps 4-12, or enter “00” to quit