1.	Enter Programming, Installers Code (41	· ·
	back up & press the * + # keys simultan	eously within 50 seconds.
2.	Screen Displays:	
	INSTALLER CODE	
	20	
3.	Press ★ 56, screen displays:	
	Set to Confirm?	
	0=No , 1=Yes 0	
	Enter 1 or 0 then press $[*]$	
	NOTE: If using the ★58 expert mode sk	tip to step 10.
NOTE:	Keypad Panics are zones 95 (1+*), 96	(3+#), & 99 (*+#). The A, B, C, & D
	keys can be programmed as panics in	*57 Function Key Programming
4.	Screen Displays:	
	Enter Zn Num.	
	(00 = Quit) 01	
	Press 95 then [★]	
4.	Screen displays:	
⊣.	Bereen displays.	
7.	ZN ZT - RC IN:L	
NOTE:	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display	s the current values for this zone. ZN
	ZN ZT - RC IN: L 95 09 10: - This is a summary screen that display is the zone number, ZT is the zone res	
NOTE:	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display	
	ZN ZT - RC IN: L 95 09 10: - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [*], screen displays:	
NOTE:	ZN ZT - RC IN: L 95 09 10: - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type	
NOTE:	ZN ZT - RC IN: L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09	
NOTE: 5.	ZN ZT - RC IN: L 95 09 10: - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [*], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone.	sponse type, RC is the report code, IN
NOTE:	ZN ZT - RC IN: L 95 09 10: - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED	sponse type, RC is the report code, IN $12 = 24 \text{Hr. MONITOR}$
NOTE: 5.	ZN ZT - RC IN: L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1	sponse type, RC is the report code, IN 12 = 24Hr. MONITOR 14 = Carbon Monoxide
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2	sponse type, RC is the report code, IN 12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER 05 = TRBLE DAY/ALARM NIGHT	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY 25 = 24-HR. NON-ALARM
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER 05 = TRBLE DAY/ALARM NIGHT 06 = 24Hr. SILENT	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY 25 = 24-HR. NON-ALARM 08 = 24Hr. Aux.
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER 05 = TRBLE DAY/ALARM NIGHT	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY 25 = 24-HR. NON-ALARM
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER 05 = TRBLE DAY/ALARM NIGHT 06 = 24Hr. SILENT 07 = 24Hr. AUDIBLE Press [★] to continue, screen displays:	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY 25 = 24-HR. NON-ALARM 08 = 24Hr. Aux.
NOTE: 5.	ZN ZT - RC IN: L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER 05 = TRBLE DAY/ALARM NIGHT 06 = 24Hr. SILENT 07 = 24Hr. AUDIBLE Press [★] to continue, screen displays: 95 REPORT CODE	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY 25 = 24-HR. NON-ALARM 08 = 24Hr. Aux.
NOTE: 5.	ZN ZT - RC IN : L 95 09 10 : - This is a summary screen that display is the zone number, ZT is the zone resis the input type & L is not used. Press [★], screen displays: 95 Zone Type Fire 09 Enter the desired value for this zone. 00 = NOT USED 01 = ENTRY/EXIT #1 02 = ENTRY/EXIT #2 03 = PERIMETER 04 = INTERIOR FOLLOWER 05 = TRBLE DAY/ALARM NIGHT 06 = 24Hr. SILENT 07 = 24Hr. AUDIBLE Press [★] to continue, screen displays:	12 = 24Hr. MONITOR 14 = Carbon Monoxide 16 = Fire w/ Verify 23 = NO ALARM RESPONSE 24 = SILENT BURGLARY 25 = 24-HR. NON-ALARM 08 = 24Hr. Aux.

NOTE:	Report code values are in hexidecimal form & range from 01-15. $A = 10$, but sends a 0 to central, $B = 11$, $C = 12$, $D = 13$, $E = 14$, & $F = 15$.	
7.	Press [*] to continue, screen displays: ZN ZT - RC IN : AD 95 07 - 10 : - This is the ending summery screen & sh	owe any changes made to this zone
8.	This is the ending summary screen & sh Press [★] to continue, screen displays: PROGRAM APLHA? 0 = NO, 1 = YES 0	ows any changes made to this zone.
	If you want to program alpha descriptor descriptors document, otherwise press 0	-
9.	Screen displays: ENTER ZN NUM. (00 = QUIT) 96 Repeat steps 3-8 or press 00 to exit the program mode.	₹56 menu mode, then press ¥ 99 to exit
	Use the following steps for programm	ing panics using the Expert Mode:
10.	Press ★58, screen displays: Set to Confirm? 0=No, 1=Yes 0 Enter 0 or 1 then press [★]	
11.	Screen displays: ZN ZT - RC IN : RT 01 09 - 10 HW : 1	
NOTE:	ZN = Zone Number ZT = Zone Response Type RC = Report Code IN = Input Type L = Loop Number	
12.	The cursor should be flashing under ZN [★] key.	, enter zone number 95 then press the
13.	The cursor should be flashing under ZT, press the "C" key to copy the previous z	* - *
NOTE:	00 = NOT USED	12 = 24Hr. MONITOR
	01 = ENTRY/EXIT #1	14 = Carbon Monoxide
	02 = ENTRY/EXIT #2	23 = NO ALARM RESPONSE
	03 = PERIMETER	24 = SILENT BURGLARY
	04 = INTERIOR FOLLOWER	25 = 24-HR. NON-ALARM
	05 = TRBLE DAY/ALARM NIGHT 06 = 24Hr. SILENT	07 = 24Hr. AUDIBLE 08 = 24Hr. Aux.
	00 = 24HF. SILENT 09 = FIRE	00 – 2 4 пг. Аих.
	U) — FIRE	

	31 enter 3 + 1). Valid entries are 0-9
15.	Press [★] to continue to the next zone, repeat steps 12-14
16.	To exit ★58 expert mode press 00 then ★ when the cursor is flashing under the ZN, screen displays:
	Enter ★ or #
17.	Press ★99 to exit program mode.

functions A, B, & C by entering 00 for the function.

The cursor should be flashing under the RC, enter the desired report code (ex. If

You MUST enable keypad panics in *57 function key programming for key

14.

NOTE: